 





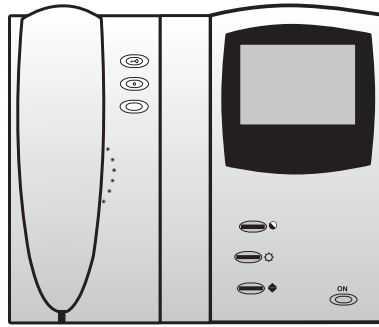 
 







**VHC3033-2
(2-WIRE color)**

-  Door release button (Tö)
-  Light button (LT)
-  Function button with LED
-  Contrast
-  Brightness
-  Color

**VH3033-4
(4-WIRE B/W)**

-  Door release button (Tö)
-  Light button (LT)
-  Function button with LED
-  Contrast
-  Brightness
-  V-Hold

START VOICE COMMUNICATION WITH THE DOOR STATION

AFTER A VISITOR HAS RUNG THE BELL AT THE ENTRANCE, THE MONITOR WILL TURN ON AUTOMATICALLY. YOU CAN LIFT THE HANDSET AND TALK TO THE DOOR STATION. YOU ARE ALSO ABLE TO ACTIVATE THE DOOR OPENER. WHEN HANGING UP THE HANDSET, THE COMMUNICATION WILL END AND THE MONITOR WILL TURN OFF AUTOMATICALLY.

YOU CAN SWITCH ON THE MONITOR MANUALLY BY PRESSING THE ON - BUTTON . TO SWITCH OFF THE MONITOR DEPRESS THE ON - BUTTON FOR ABOUT 3 SECONDS.

MANUALLY SWITCHING MULTIPLE CAMERAS (IF EQUIPPED)

TURN ON MONITOR BY PRESSING THE ON - BUTTON . PUSHING THIS BUTTON AGAIN WILL CYCLE THROUGH THE CAMERAS AVAILABLE ON YOUR SYSTEM.

CHANGING THE DOORBELL SOUND OF THE MONITOR

YOU CAN SELECT A DIFFERENT DOORBELL SIGNAL FOR EACH INDOOR STATION. THERE ARE 8 SIGNALS AVAILABLE.

- LIFT THE HANDSET AND WAIT UNTIL THE RED LED LIGHTS AND THE BUSY TONE HAS STOPPED.

(MAKE SURE THAT THE HANDSET HASN'T BEEN CALLED SHORTLY BEFORE, OTHERWISE LIFT HANDSET AND HANG IT UP AGAIN TO STOP COMMUNICATION)

- NOW YOU CAN LISTEN TO ALL THE BELL SIGNALS ONE AFTER ANOTHER BY KEEPING THE FUNCTION BUTTON DEPRESSED UNTIL THE NEXT TONE STARTS. THE LAST TONE HEARD WILL BE STORED AUTOMATICALLY. WHEN FINISHED HANG UP THE HANDSET.

YOU ONLY CAN CHANGE THE DOORBELL SIGNAL OF THE ENTRANCE. THE SIGNAL OF THE APARTMENT BUTTON IS SET AND CAN'T BE CHANGED.

IN SYSTEMS WITH MORE THAN ONE ENTRANCE THERE IS A DIFFERENTIATION BETWEEN THE DOORBELL SIGNALS AUTOMATICALLY.

HOW TO ADJUST THE VOLUME OF THE RINGTONE

THE VOLUME OF THE RINGTONE CAN BE ADJUSTED WITH THE FUNCTION KEY. KEEP THIS BUTTON DEPRESSED WHEN HANDSET IS HUNG UP AND VOLUME WILL DECREASE SLOWLY TO 'MUTE' THEN INCREASE TO FULL VOLUME. RELEASE BUTTON AT THE DESIRED VOLUME LEVEL.

(MAKE SURE THAT THE HANDSET HASN'T BEEN CALLED SHORTLY BEFORE, OTHERWISE LIFT HANDSET AND HANG IT UP AGAIN TO STOP COMMUNICATION)

REPLACING AN INDOOR STATION WITH A NEW ONE

THE NEW INDOOR STATION MUST BE PROGRAMMED INTO THE SYSTEM (SEE PROGRAMMING INSTRUCTIONS!)